


Interim report: Microsearch Laboratories Ltd

The Cleancare device contains technology capable of removing and decomposing adventitious atmospheric contaminants. In this interim report the performance of the Cleancare device is reported with reference to removal of both Ammonia and Methane in a 123 m³ sealed space under continuous operation .

Data

	Dose time				
Substance	0	15	30	45	60
Methane ppm	110	76	38	14	0
Ammonia ppm	93	62	41	11	0

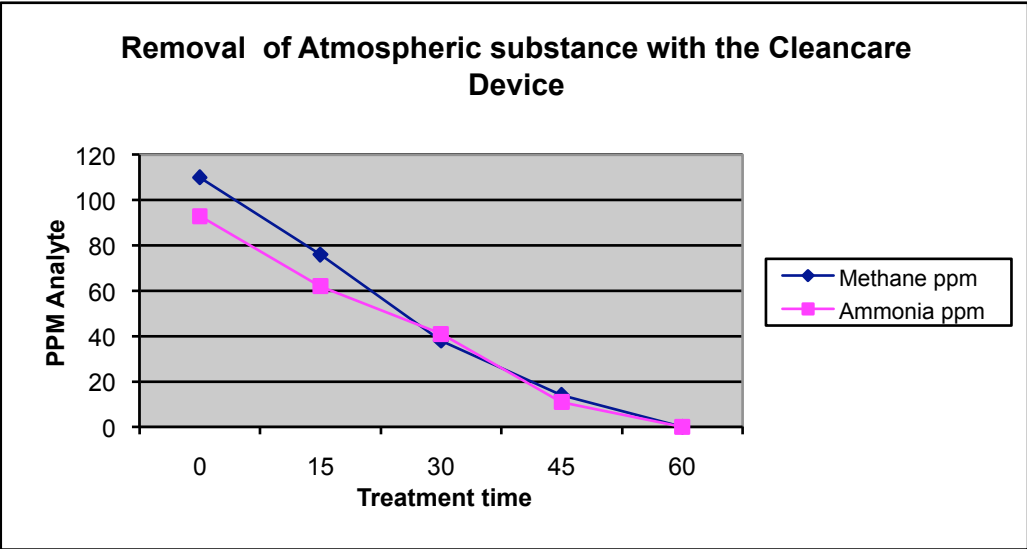

Comments;

Under continuous operation the Cleancare device produced undetectable levels of Ammonia and Methane in the test environment within 60 minutes